 


Instruction Manual

Cordless Handheld Vacuum Cleaner

Model: BHV20

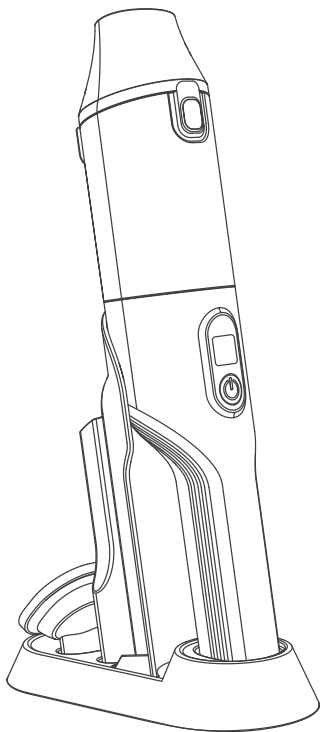

IMPORTANT Safety Instructions-for Household Use
Only Read Carefully Before Use -Save These Instructions.

Dear customer,
Thank you for purchasing the product.

Contents

1 Important Instructions.....	02
1.1 Warning and Safety Precaution.....	02
1.2 Battery and Charging/ Information.....	04
2 About Your Vacuum Cleaner.....	05
2.1 Main Body.....	05
2.2 Accessories.....	05
3 Charging Base Installation Instructions.....	06
4 Using Your Vacuum Cleaner.....	07
4.1 Important Tips Before Use	07
4.2 Instructions for Using the Function.....	07
5 Cleaning and Maintenance.....	09
6 Technical Specifications.....	10
7 Troubleshooting.....	11
8 FCC Statement.....	12

1. Important Safety Instructions

Dear Customer:

We are deeply honored that you can choose our products. Our products adopt the most advanced technology on the market so that you can enjoy it with high efficiency easy operation and long-lasting service Besides our product design is cool and easy to maintain, it will make your life easier Before using our cordless handed vacuum cleaner please read this instruction carefully and keep this manual for future reference. Failure to follow these instructions could result in product malfunction or damage.

1.1 Warning And Safety Precaution

To reduce dangers, such as body injury, fire, shock, property damage, caused by improper use, please read the following instruction carefully.

- Do not let young children wield it or use it as a toy, please use it under adult supervision when using it near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children are not allowed to play with the equipment. Cleaning and maintenance can't be carried out when unsupervised.
- The product is only provided for family, please do not use for business or industry.
- Please do not pull the electrical wire to unplug the plug. Please unplug by grasping the plug and not the cord.
- Please do not use it outside.
- Only wield the product according to the brochure, and only use the recommended accessories by the manufacturer.
- If the battery adapter is damaged, it must be replaced by a professional to avoid danger. Please do not use the vacuum to suction some item acute or hard, such as glass, rivet, screw, coin, that kind of things may break the vacuum.
- Please do not suck the ash from walls, in fireplaces or of coals with the vacuum.
- Do not use as an attachment to power tools for dust collection.
- Please do not use to suction dust or smoke, such as hot coal, stub, matches.
- Do not clean flammable or combustible materials (such as lighter liquid, gasoline, alcohol or kerosene) with the vacuum. And its use in areas that may be vacuum is also forbidden.
- Do not use to suction toxic solutions (such as chlorine bleach, ammonia, and drain cleaners).

- Do not use the vacuum in a closed area with paint, paint thinner, mothproof substance, flammable dust, and other explosive or poisonous steam.
- Keep the nozzle away from hair, face, fingers, bare feet or loose clothing.
- Please do not insert accessories while the device is running.
- Check whether the device and adapter are visibly damaged regularly.
- If the shell is damaged or there is other damages, the device must not be used.
- Please do not try to dismantle the device, the adapter or replace connected wire by yourself. It must be maintained by professional maintained center to do that, and it is considerable dangerous to users if with improper operation.
- Keep the power cord away from heated surfaces (such as cookware and other hot surfaces).
- Risk of electric shock. Do not hold the plug or device with wet hands.
- During operation, do not point the vacuum cleaner at people or animals.
- Be sure to turn off the device before connecting the charging dock.
- Do not leave the appliance unattended when it is switched on.
- Only use the charging stand on a flat and stable surface.
- Keep the work area well lit.
- Do not use it without the dust cup and filter installed.
- Do not use to suction any liquid.
- Risk of electric shock. To avoid the risk of electric shock, do not put the device or charging base into water or other liquids.
- The machine can be used only on dry surfaces.
- In order to avoid fire and explosion, please check whether the machine and charging stand are damaged before use. Do not use damaged vacuum cleaner or charging stand. Be extra careful when cleaning on the stairs.
- Before installing and using it, ensure that the filter is completely dry after routine cleaning.
- After routine maintenance, make sure that the dust cup and filter are installed correctly. Make sure the accessories are not blocked.
- This product has a rechargeable lithium ion battery. Do not incinerate the battery, otherwise it will explode at high temperature.
- Ensure that the location of the wire is not stepped on, tripped, or otherwise damaged or stressed.
- If the air flow is restricted, do not use; if the air passage is blocked, turn off it. Clear all obstacles, and then restart.
- Do not pull the cord around sharp edges or corners.

Please keep this instruction manual for future use.

1.2 Battery and Charging/ Information

Lithium-ion Battery

Important: Lithium-ion batteries and products that contain Lithium-ion are subject to stringent transportation regulations. If you need to ship this product (with the battery included) for service, travel or any other reason, you **MUST** comply with the following shipping instructions:

- Remove the Lithium-ion battery from the product.
- Place a Piece of tape over the battery metal charging contacts.
- Reinstall the battery (with the tape on it) in the product and secure the battery door.
- Package the product in its original packaging or in your own packaging that prevents any movement during transportation.
- Ship via ground transportation only (no air shipping).

Battery Storage

 
Please store the vacuum cleaner in a cool and dry place. Humid or hot environment is damaging to vacuum cleaner and battery.




The symbol on this product or its packaging indicates that this device cannot be disposed as unsorted municipal waste. To dispose of such device, you need to use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps hazardous substances can leak into the groundwater and get into the food Chain, damaging your health and well-being. Please contact your local or regional waste authority for more information on collection, reuse and recycling programs.

2. About Your Vacuum Cleaner

2.1 Main Body

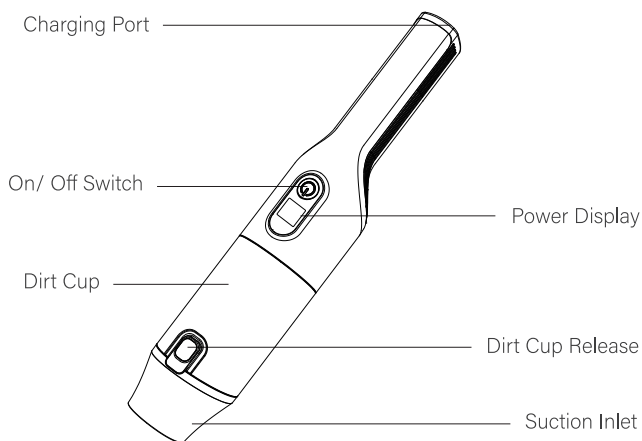

 2.2 Accessories

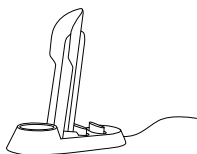

Charging Base



Washable Filter Cup



Sofa Brush



Crevice Brush

 
 


Filter


3. Charging Base Installation Instructions

Tools Needed: Phillips Screwdriver

1. As the picture shows, use screws to fix the Charging Base and Mounting Plate.

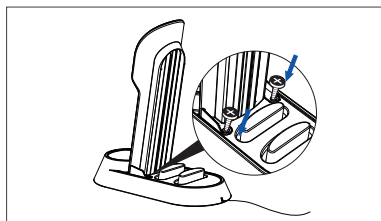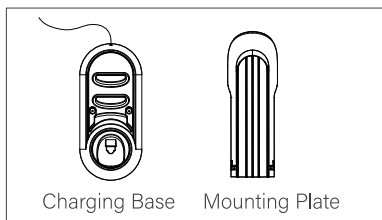

 2. As the picture shows, Insert the nozzle upward into the Charging Base. Plug in the charger, the power indicator will continue to (slowly) flash.

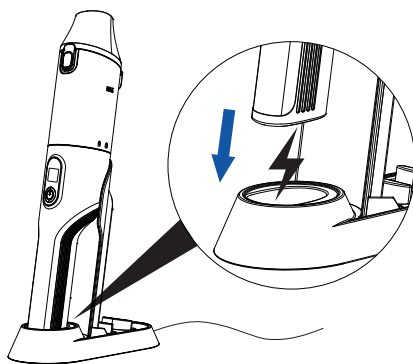

NOTE:

1. Connect the device to the plugged-in charger, and the charging indicator will light up. It is charging indefinitely with no damage or danger.
2. If the device detects that the battery is low, the indicator light will flash rapidly. Please recharge the vacuum cleaner in time.
3. When the battery is fully charged, the power level shows 100%.

 
4. Using Your Vacuum Cleaner

4.1 Important Tips Before Use


1. When using for the first time, fully discharge the battery to ensure normal use.
2. The battery cannot be "Overcharged", please use the Original Power Adapter.
3. After each use, please fully charge the battery within 1 week. If the battery is in a state of power loss, the battery life will be greatly reduced.
4. Please do not use it if the filter is not completely dry, or incorrectly installed.

4.2 Instructions for Using the Function



1. Press the power button, press once for low gear, press twice for high gear, press again to turn off.

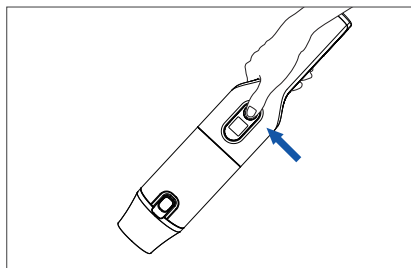

 2. Point the nozzle to the surface which is ready to clean.

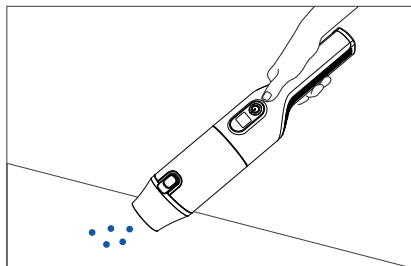

  3. The machine can clean the workshop, vehicles, couch, and carpets with additional accessories. What should be done is to push the brush in to the machine.

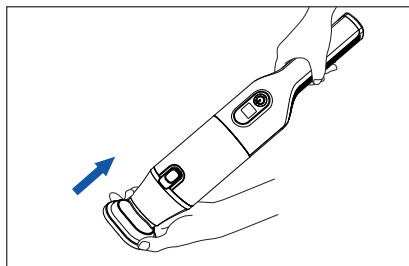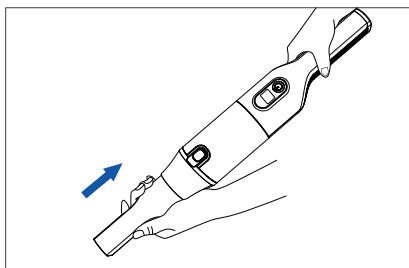

NOTE:

1. Be sure to install the required accessories after the vacuum cleaner has been turned off.
2. Return the product to the charger immediately after use, so that it can be fully charged for next time use.
3. Make sure that the vacuum cleaner is fully meshed with the charging base.

5. Cleaning and Maintenance

 
Cleaning and maintenance is necessary to maintain the best cleaning performance, as follows:

Carefully clean the dust cup and filter.


Warning

1. Please clean the vacuum cleaner after turning it off.
2. Wipe and clean the dust cup and the body of the device before assembling to avoid abrasion due to dust particles.


1. Press the dust cup release button, then the dust cup will be released.

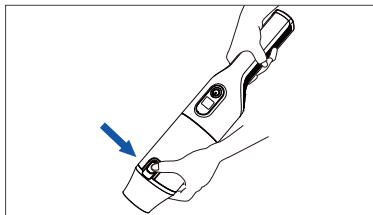

 
2. Point your handheld vacuum cleaner to the top of the trash can, and guide the dust into the trash can.

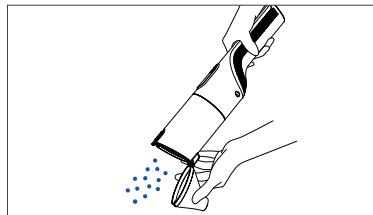

 
3. Swirl it according to the signs, remove the dust cup for thoroughgoing clean. Wipe the dust cup gently with a dry cloth to remove dust.

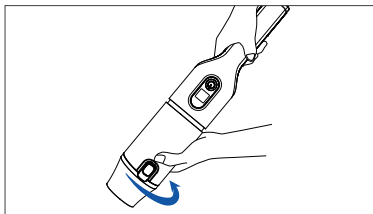

 
4. Rotate the filter counterclockwise to remove the filter part. Tap or shake the dust cup filter to remove dust and debris.

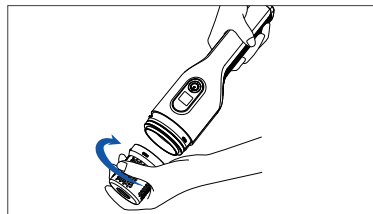

 5. Wipe the dust cup gently with a dry cloth to remove dust.

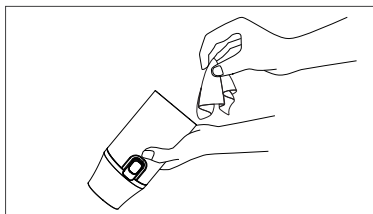

 6. The filter part can be cleaned with warm water. After drying the filter, proceed installation of putting it back to handheld vacuum cleaner.

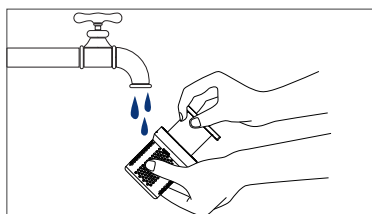

NOTE:

1. The correct installation of the filter is very important before use.
2. Maximum dust collection can only be achieved with a clean filter and an empty dust cup.
3. If dust starts to fall out of the product after it is turned off, this indicates that the dust cup is full and needs to be cleaned. Clean the filters regularly with warm water to make sure they are completely dry before using them again.
4. The cleaner the filter, the better the performance of the product.

6. Technical Specifications

Product Model	BHV20
Input	18 V \approx 0.5A
Rated Power	200 W
Motor Type	BLDC
Battery Voltage	DC 14.8 V
Battery Type	Li-ion 2500mAh
Max Cleaning Time	40 mins (Low-Grade)
Charging Time	4-4.5H

7. Troubleshooting

Description	Questions	Answers
The machine does not work.	The machine does not work.	Charge the battery.
The machine does not suck or gently sucks stuff.	The dust cup is full.	Empty the dust cup.
The machine overflows with visible dust.	The dust cup is not correctly assembled.	Correctly place the container and solidly assemble it.
	The filter needs to be cleaned.	Follow the instructions about how to clean the filter on Page 7.
	The battery needs to be charged.	Charge the battery. Follow the instructions about how to charge the battery on Page 5.
	The filter is wet.	Dry thoroughly before use.
	The adapter is not correctly connected with the socket.	Check whether the charger and socket is solidly connected.
	The charger is wrong.	Use and only use the charger which is complimentary in the package.
The machine can not be charged.	The adapter is not correctly connected with the socket.	Check whether the charger and socket is solidly connected.
	The charging port of the vacuum cleaner is not correctly connected with the adapter.	Check whether the adapter and vacuum cleaner is solidly connected.
	The charger is wrong.	Use and only use the charger which is complimentary in the package.

Warning

1. When the filter is clogged, the machine operates in Power Mode, which may cause the machine to shut down and enter a protective state.
2. Please clean the dust cup and filter promptly after each use.



Customer Support

THANK YOU FOR PURCHASING.

Your satisfaction is always our first priority. We are committed to delivering the best products and services in the way our customers want. Whenever you have any problem, please contact our Consumer Support.

✉ Email: Robotvac.after@outlook.com

8. FCC Statement

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

DOC

Learn more about the UK Declaration of Conformity, Please click below link to download:
<https://1855005.hlcode.top/?id=NETLzdi>

Learn more about the EU Declaration of Conformity, Please click below link to download:
<https://1855005.hlcode.top/?id=NETLzdg>

Erfahren Sie mehr über die EU-Konformitätserklärung. Klicken Sie zum Herunterladen auf den folgenden Link: <https://1855005.hlcode.top/?id=NETLzd7>



Made in China